# **EXC-8000PCIeHC**

Test and Simulation Carrier Board for PCle Systems

**User's Manual** 



311 Meacham Ave ◆ Elmont ◆ NY 11003 ◆ tel. (516) 327-0000 ◆ fax (516) 327-4645 e-mail: excalibur@mil-1553.com website: www.mil-1553.com

Copyright © 2019–2022 Excalibur Systems. All Rights Reserved.

# **Table of Contents**

1	Intro	oducti	ion	
	1.1	Overv	view	.1-2
		1.1.1	Board Features	. 1-3
		1.1.2	Block Diagram	. 1-5
	1.2	Instal	llation	.1-6
	1.3	Techi	nical Support	.1-6
2	PCI	Archi	tecture	
	2.1	Memo	ory Structure	.2-2
	2.2		Configuration Space Header	
	2.3		Configuration Registers	
	2.5		Vendor Identification Register (VID)	
		2.3.1	Device Identification Register (DID)	
		2.3.3	PCI Command Register (PCICMD)	
		2.3.4	± ', ', ', ', ', ', ', ', ', ', ', ', ',	
		2.3.5		
		2.3.6		
		2.3.7	Cache Line Register Size Register (CALN)	
		2.3.8	Latency Timer Register (LAT)	
		2.3.9		
		2.3.10	Built-In Self-Test Register (BIST)	
			Base Address Registers (BADR)	
			Cardbus CIS Pointer	
		2.3.13	Subsystem ID	. 2-6
			Subvendor ID	
			Expansion ROM Base Address Register (XROM)	
			PCI Capabilities Pointer	
			Interrupt Line Register (INTLN)	
			Interrupt Pin Register (INTPIN)	
			Minimum Grant Register (MINGNT)	
			Maximum Latency Register (MAXLAT)	
	2.4		d Global and DMA Registers Memory Space Map	
	2.5	Board	d Global Registers Map	.2-9
		2.5.1	Board Identification Register	
		2.5.2	3	
		2.5.3	Interrupt Status Register	
		2.5.4	Interrupt Reset Register	
		2.5.5	Module Info Registers for Modules 0 – 3	
		2.5.6	Time Tag Clock Select Register	
	2.6	IRIG I	B Global Registers	.2-13
		2.6.1	Sync IRIG B Register	2-14
		2.6.2	IRIG B Time SBS High Register	2-14
		2.6.3	IRIG B Time SBS Low Register	
		2.6.4	IRIG B Time Days Register	
		2.6.5	IRIG B Time Hours Register	
		2.6.6	IRIG B Time Minutes Register	
		2.6.7	IRIG B Time Seconds Register	
		2.6.8	Control Functions Registers	
		2.6.9	FPGA Revision Register	
	2.7	Globa	al Timer Registers	
		2.7.1	Timer Prescale Register	
		2.7.2	Timer Preload Register	
		2.7.3	Timer Control Register	2-16

		2.7.4 General Purpose Timer Register	
	2.8	2.7.5 Board Type Register	
3	Med	chanical and Electrical Specifications	
	3.1	Board Layout	3-2
	3.2	Led Indicators	
	3.3	DIP Switches	
		3.3.1 Select ID DIP Switch [SW1]	
	3.4	Connectors	
		3.4.1 SATA Connector [J3]	
		3.4.2 Communications I/O Connector [J1]	3-5
		3.4.2.1 External Signals	3-10
		3.4.2.2 Adapter Cable	3-12
		3.4.2.3 Adapter Cable EXC-8000CON Assembly	3-13
		3.4.3 PCI Express Bus Edge Connector	3-14
		3.4.3.1 Synchronizing with an External Source	3-15
		3.4.3.2 Synchronizing Between Boards	3-16
	3.5	Power Requirements	3-16
4	Ord	lering Information	
	4.1	Part Number Examples	4-3
	4.1	Adapter Cable Ordering Information	4-4

## **Figures**

Figure 1-1	Block Diagram	1-5
Figure 2-1	PCI Configuration Space Header	
Figure 2-2	DMA Registers Memory Space Map	2-8
Figure 2-3	Global Registers Memory Space Map	2-8
Figure 2-4	Global and IRIG B Registers Map	
Figure 2-5	Module Memory Space Map	2-18
Figure 3-1	Board Layout	
Figure 3-2	Board PC Bracket – Front View	
Figure 3-3	DIP Switch SW1 with All Switches Set to ON (Selected ID#0)	3-3
Figure 3-4	15+7-Pin Male SATA Connector [J3] – Front View	3-4
Figure 3-5	J1 Connector – Front View	3-5
Figure 3-6	J1 Mating Connector – Front View	3-5
Figure 3-7	15-Pin Female I/O Connector – Front View	3-12
Figure 3-8	Twinax I/O Connector – Front View	3-12
Figure 3-9	9-Pin Male Connector – Front View	
Figure 3-10	EXC-8000CON Assembly – Front View	3-13
Figure 3-11	EXC-8000CON Assembly – Rear View	3-13
Figure 3-12	EXC-8000CON Assembly – Rear View with Soldering Holes	3-13
Figure 3-13	EXC-8000CON Assembly Folded	3-13
Figure 3-14	EXC-8000CON Assembly Inserted Into Hood	
Figure 3-15	Connector Hood Closed	3-14
Figure 3-16	Synchronization of a Single Board to an External System	3-15
Figure 3-17	Synchronization of an External System to a Single Board	3-15
Figure 3-18	Synchronization Between Boards	3-16

### **Tables**

Table 2-1	PCI Command Register	2-3
Table 2-2	PCI Status Register	
Table 2-3	Base Address Registers Definition	2-6
Table 2-4	Base Address Register	2-6
Table 2-5	Board Identification Register	
Table 2-6	Software Reset Register	
Table 2-7	Interrupt Status Register	2-11
Table 2-8	Interrupt Reset Register	2-11
Table 2-9	Module Info Registers	
Table 2-10	Time Tag Clock Select Register	
Table 2-11	Sync IRIGB Register	
Table 2-12	Timer Prescale/General Purpose Timer Resolution	2-16
Table 2-13	Timer Control Register	2-17
Table 2-14	Board Type Register	2-18
Table 3-1	Led Indicators	3-3
Table 3-2	DIP Switch Settings for Unique Selected ID	3-3
Table 3-3	Selected ID Bits	3-3
Table 3-4	15+7-Pin Male SATA Connector Pinouts	3-4
Table 3-5	J1 Connector Pinouts for M8K429RT5, M8K717, M8K825CAN, M8KDiscrete, M8KSer	rial
	and M8KMMSI Modules	3-6
Table 3-6	J1 Connector Pinouts for M8K1553Px, M8K1760Px and M8K708 Modules	3-7
Table 3-7	J1 Connector Pinouts for Double-Sized M8KH009 and M8K1553MCH Modules	3-8
Table 3-8	J1 Connector Pinouts for the M8KADDA Module	3-9
Table 3-9	J1 Connector Pinouts for External Signals	3-10
Table 3-10	External Signal Descriptions	3-11
Table 3-11	PCI Express Bus Edge Connector Pinouts	
Table 4-1	Ordering Information	4-1
Table 4-2	Module Codes	4-1

page iv Excalibur Systems

## 1 Introduction

The following topics are covered:

1.1	Overv	/iew	. 1-2
	1.1.1	Board Features	. 1-3
	1.1.2	Block Diagram	. 1-5
		lation	
1.3	Techr	nical Support	. 1-6

Note: The *EXC-8000PCIeHC* will not work without the power cable connected. See 1.2 Installation on page 1-6.

### 1.1 Overview

The *EXC-8000PCIeHC* carrier board is a multiprotocol PCIe interface board for avionics test and simulation applications. The board holds up to four independent modules, where each module can be any one of the following types:

M8K429RT5 ARINC 429 multi-channel interface module. This module supports five

ARINC 429 channels each of which can be configured in real time as a

receive or transmit channel.

M8K708 ARINC 708 interface module. This module supports up to two ARINC 708/

453 channels for the Weather Radar Display Databus. Each channel is selectable as transmit or receive and implements a 64K-word FIFO and

supports polling and/or interrupt driven operation.

M8KH009 H009 interface module. This module supports a fully functional H009 channel

(CCC, multi-PU,MON) and a concurrent Bus Monitor. This is a double-sized

module and occupies two modules locations.

M8K717-Nx ARINC 717 interface module. This module supports two ARINC 717

channels; one receive channel and one transmit channel.

M8K825CAN-S5 ARINC 825 interface module. This module supports up to five ARINC 825

channels.

M8KDiscrete Discrete I/O interface module. This module supports 10 bi-directional

Discretes with TTL (0 to 5 volts) or avionics (0 to 32 volts) voltage levels.

M8K1553Px MIL-STD-1553 interface module. This module operates as a Bus Controller,

up to 32 Remote Terminals and as a Bus Monitor. It supports an Internal

Concurrent Monitor in RT and BC/RT modes.

M8K1553PxS Same as the M8K1553Px, but for only one Remote Terminal at a time (single

function) and one mode at a time (no BC/RT mode) and no error injection.

**M8K1553PxM** Monitor-only version of the M8K1553Px.

**M8K1553PxSM** Monitor-only version of the M8K1553PxS.

M8K1553MCH MIL-STD-1553 MCH interface module. This module operates as a Bus

Controller, Remote Terminal and as a Bus Monitor. This is a double-sized

module and occupies two modules locations.

M8K1760Px MIL-STD-1760 interface module. This module operates as a Bus Controller,

up to 32 Remote Terminals and as a Bus Monitor. It supports an Internal

Concurrent Monitor in RT and BC/RT modes.

**M8K1760PxS** Same as the M8K1760Px, but for only one Remote Terminal at a time (single

function) and one mode at a time (no BC/RT mode) and no error injection.

M8K1760PxM Monitor-only version of the M8K1760Px.

M8K1760PxSM Monitor-only version of the M8K1760PxS.

M8KMMSI-R5 Mini Munitions Store Interface module. This module supports RT, BC/

Concurrent-RT/ Concurrent Monitor and Bus Monitor modes. Up to 5 hub

ports EBR-1553 (10 Mbps MIL-STD-1553 protocol using RS-485

transceivers) and a composite monitor output (cBM).

M8KSerial-Jx Serial communications interface module. This module supports two

independent channels of serial communications, each of which can be

selected as RS485, RS422 or RS232.

#### **M8KADDA**

Multichannel digital-to-analog and analog-to-digital interface module. This module supports up to 10 single ended, or 5 differential, digital-to-analog (DAC) output channels, as well as 5 single ended or 5 differential analog-to-digital (ADC) input channels.

Excalibur will be adding modules to those listed above, increasing the boards' flexibility even further.

You can choose to populate the board with different types of modules or with multiple modules of the same type. For example, populating the board with four *M8K429RT5* modules will give you twenty programmable channels. All modules come with Windows drivers, including source code.

#### 1.1.1 Board Features

#### **General Features**

• Supported protocols (on up to 4 removable modules):

ARINC 429/575 (5 channels per module)

ARINC 708/453 (2 channels per module)

ARINC 717 (2 channels per module)

ARINC 825 (CAN) (5 channels per module)

MIL-STD-1553 (single or multifunction)

MIL-STD-1760 (single or multifunction)

H009 (double-sized module with one channel)

Discrete I/O (10 channels per module)

Serial RS-485/RS-422/RS-232 (2 channels per module)

MMSI/AS5652 (5 ports per module)

A/D and D/A (5 differential or 10 single ended channels)

16-bit Count Down Timer

1-65,635 us resolution

Interrupt or global reset upon count down

### **IRIG B Time Code Input**

· Carrier wave:

1KHz Amplitude modulated sine wave

· Rate Designation: 100 peaks per second

Modulation ratio: 3:1

• Input Amplitude: 0.8–3.5 Vpp (3 Vpp Typ)

Coded Expressions supported:

BCD time-of-year code word

Control functions

Straight Binary Seconds (SBS) time-of-day

Application:

Synchronization of Time Tags, display and IRIG B time

### **Physical Characteristics**

Dimensions: 130.0 mm x 98.5 mm
Weight: 92.5 g (without modules)

### **Operating Environment**

• Temperature: 0°-70°C standard temperature

-40° to +85°C extended temperature (optional)

• Humidity: 5%–90% noncondensing

• MTBF: 335,670 hours at 25°C, G<sub>F</sub>, S217F

#### **Host Interface**

• PCI Express compliance: x1 lane PCIe v1.1

Memory space occupied: 64 MB

Interrupts: INTA# virtual wire

• Power: Depends on configuration. For more details, see

3.5 Power Requirements on page 3-16.

### **Software Support**

• Excalibur Carrier Board Software Tools:

Intuitive and flexible API with source code

Compatible with 32/64-bit Windows 7/8/10 & Linux kernel 3.x/4.x

Includes application interface for NI LabView & CVI

• Exalt Plus: Excalibur Analysis Laboratory Tools for Windows (optional)

### **System Requirements**

Operating system: 64-bit Windows

• CPU: Intel® Core™ i3 Processors or equivalent (recommended)

• RAM: 8 GB (recommended)

page 1 - 4 Excalibur Systems

### 1.1.2 Block Diagram

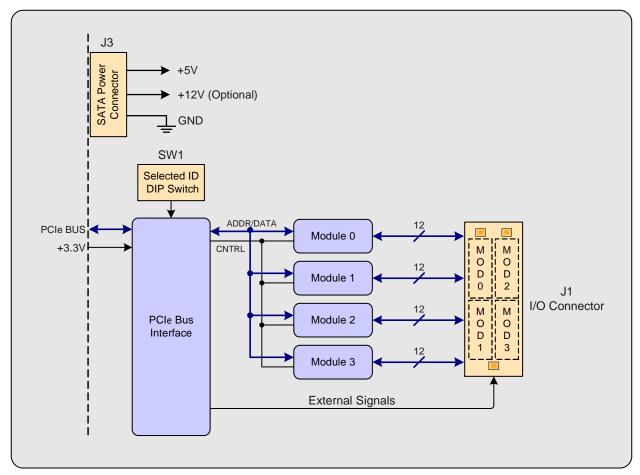


Figure 1-1 Block Diagram

### 1.2 Installation

For hardware and software installation instructions, see Installation Instructions.pdf in the root folder of the installation CD. When downloading new software from the Excalibur website, Installation Instructions.pdf is contained in the zip file.

The *Excalibur Installation CD* you received with your package is the most recent release of the CD as of the date of shipping. Software and documentation updates can be found and downloaded from our website: www.mil-1553.com.

The standard software provided with Excalibur boards and modules is for Windows operating systems. For more details, see **Installation Instructions.pdf**. Software for other operating systems may be available. Check on our website or write to excalibur@mil-1553.com.

## 1.3 Technical Support

Excalibur Systems is ready to assist you with any technical questions you may have. For technical support, visit the <u>Technical Support</u> page of our website (<u>www.mil-1553.com</u>). You can also contact us by phone. To find the location nearest you, visit to the <u>Contact Us</u> page of our website. Before contacting Technical Support, please see <u>Information Required for Technical Support</u>.

page 1 - 6 Excalibur Systems

# 2 PCI Architecture

Memor	ry Structure	2-2	
PCI Co	onfiguration Space Header	2-2	
PCI Configuration Registers			
2.3.1			
2.3.2			
2.3.3			
2.3.4			
2.3.5	Revision Identification Register (RID)	2-4	
2.3.6	Class Code Register (CLCD)		
2.3.7	Cache Line Register Size Register (CALN)	2-5	
2.3.8	Latency Timer Register (LAT)	2-5	
2.3.9	Header Type Register (HDR)	2-5	
2.3.10	Built-In Self-Test Register (BIST)	2-5	
2.3.11	Base Address Registers (BADR)	2-5	
2.3.12	Cardbus CIS Pointer		
2.3.13	Subsystem ID	2-6	
2.3.14	Subvendor ID	2-6	
2.3.15	Expansion ROM Base Address Register (XROM)	2-6	
2.3.16	PCI Capabilities Pointer	2-7	
2.3.17	Interrupt Line Register (INTLN)	2-7	
2.3.18	Interrupt Pin Register (INTPIN)		
2.3.19	Minimum Grant Register (MINGNT)	2-7	
2.3.20	Maximum Latency Register (MAXLAT)	2-7	
Board	Global and DMA Registers Memory Space Map	2-8	
Board	Global Registers Map	2-9	
2.5.1			
2.5.2			
2.5.3	Interrupt Status Register		
2.5.4	Interrupt Reset Register	. 2-11	
2.5.5	Module Info Registers for Modules 0 – 3	. 2-12	
2.5.6	Time Tag Clock Select Register	. 2-12	
IRIG B	Global Registers	. 2-13	
2.6.1			
2.6.2			
2.6.3			
2.6.4			
2.6.5			
2.6.6	<u> </u>		
2.6.7			
2.6.8			
2.6.9			
Global			
	e Memory Space Map		
	PCI Co PCI Co 2.3.1 2.3.2 2.3.3 2.3.4 2.3.5 2.3.6 2.3.7 2.3.8 2.3.10 2.3.11 2.3.15 2.3.16 2.3.15 2.3.16 2.3.17 2.3.18 2.3.20 Board Eosard 2.5.1 2.5.2 2.5.3 2.5.4 2.5.5 2.5.6 IRIG B 2.6.1 2.6.2 2.6.3 2.6.4 2.6.5 2.6.6 2.6.7 2.6.8 2.6.9	2.3.1         Vendor Identification Register (VID)           2.3.2         Device Identification Register (DID)           2.3.3         PCI Command Register (PCICMD)           2.3.4         PCI Status Register (PCISTS)           2.3.5         Revision Identification Register (RID)           2.3.6         Class Code Register (CLCD)           2.3.7         Cache Line Register (CLCD)           2.3.8         Latency Timer Register (HDR)           2.3.10         Built-In Self-Test Register (BIST)           2.3.11         Base Address Registers (BADR)           2.3.12         Cardbus CIS Pointer           2.3.13         Subsystem ID           2.3.14         Subvendor ID           2.3.15         Expansion ROM Base Address Register (XROM)           2.3.16         PCI Capabilities Pointer           2.3.17         Interrupt Line Register (INTLN)           2.3.18         Interrupt Register (INTLN)           2.3.19         Minimum Grant Register (INTLN)           2.3.19         Minimum Grant Register (MINGNT)           2.3.20         Maximum Latency Register (MAXLAT)           Board Global and DMA Registers Memory Space Map           Board Global Registers Register           2.5.2         Software Reset Register           2.5.3<	

## 2.1 Memory Structure

The EXC-8000PCIeHC requests the following memory blocks:

• The first memory block (Base Address Register 0) is 64 MB and contains the memory space for the modules on the board. For more information, see 2.8 Module Memory Space Map on page 2-18.

- The second memory block (Base Address Register 1) is 32 KB in size and contains the DMA registers. DMA functionality is described in the software tools programmer's reference of each of your board's modules.
- The third memory block (Base Address Register 2) is 8 KB in size and contains the Global registers. For more information, see 2.5 Board Global Registers Map on page 2-9.

## 2.2 PCI Configuration Space Header

The board includes a PCI Configuration Space Header, as required by the PCI specification. The registers contained in this header enable software to set up the Plug and Play operation of the board, and set aside system resources.

The following figure shows the PCI Express Configuration Space Header for PCI Express:

MAX_LAT	MIN_GNT	Interrupt Pin	Interrupt Line	3C H	
	Reserved = 0s				
	Reserved = 0s Cap. pointer				
	Expansion ROM Base	e Address (Not Used)		30 H	
Subsys	stem ID	Subsystem	Vendor ID	2C H	
	Cardbus CIS Point	er – Not Used = 0s		28 H	
Base Address Register #5 – Not Used				24 H	
Base Address Register #4 – Not Used				20 H	
Base Address Register #3 – Reserved				1C H	
Base Address Register #2 – Global Registers				18 H	
Base Address Register #1 – DMA Registers					
Base Address Register #0 – Module Memory Space				10 H	
BIST Header Type = 0		Latency Timer	Cache Line Size	0C H	
	Class Code		Rev ID	08 H	
Status Register Command Register				04 H	
Devi	Device ID Vendor ID				
31 24	23 16	15 08	07 00		

Figure 2-1 PCI Configuration Space Header

## 2.3 PCI Configuration Registers

### 2.3.1 Vendor Identification Register (VID)

Power-up value 1405 H Size: 16 bits

The Vendor Identification register contains the PCI Special Interest Group vendor identification number assigned to Excalibur Systems.

Address:

Address:

Address:

00-01 (H)

02-03 (H)

04-05 (H)

### 2.3.2 Device Identification Register (DID)

Power-up value: E801 H
Size: 16 bits

The Device Identification register contains the board's device identification number.

### 2.3.3 PCI Command Register (PCICMD)

Power-up value: 0000 H
Size: 16 bits

The PCI Command register contains the PCI Command.

Bit	Bit Name	Description
10-15	Reserved	Set to 0s
09	Fast Back-to Back Enable	Always set to 0
08	System Error Enable	Always set to 0
07	Address Stepping Support	Always set to 0
06	Parity Error Enable	Always set to 0
05	VGA Palette Snoop Enable	Always set to 0
04	Memory Write and Invalidate Enable	Always set to 0
03	Special Cycle Enable	Always set to 0
02	Bus Master Enable	Always set to 1
01	Memory Access Enable	Always set to 1
00	I/O Access Enable	Since the board does not use I/O space, the value of this register is ignored.

Table 2-1 PCI Command Register

### 2.3.4 PCI Status Register (PCISTS)

Power-up value: 0080 H Size: 16 bits

The PCI Status register contains the PCI status information for PCI Express.

Address:

Address:

08 (H)

06-07 (H)

Bit	Bit Name	Description
15	Detected Parity Error	This bit is set whenever a parity error is detected. It functions independently from the state of Command Register Bit 6. This bit may be cleared by writing a 1 to this location.
14	Signaled System Error	Not used
13	Received Master Abort	This bit is set when the device receives a master abort to terminate a transaction. This bit can be reset by writing a 1 to this location.
12	Received Target Abort	Not used
11	Signaled Target Abort	Not used
09-10	Device Select (DEVSEL#) Timing Status	Set to 00 (fast timing)
08	Data Parity Reported	Not used
07	Fast Back-to- Back Capable	Set to 0
06	<b>UDF Supported</b>	Set to 0
05	66MHz capable	Set to 0
04	Capability List enable	Set to 1
03	Interrupt Status	This bit is set when an interrupt is received.
00-02	Reserved	

Table 2-2 PCI Status Register

### 2.3.5 Revision Identification Register (RID)

Power-up value: 01 H
Size: 8 bits

The Revision Identification register contains the revision identification number of the board.

page 2 - 4 Excalibur Systems

### 2.3.6 Class Code Register (CLCD)

Power-up value: FF0000 H
Size: 24 bits

The Class code Register value indicates that the board does not fit into any of the defined class codes.

### 2.3.7 Cache Line Register Size Register (CALN)

Power-up value: 10 H Size: 8 bits

Not used

### 2.3.8 Latency Timer Register (LAT)

Power-up value: 00 H
Size: 8 bits

Not used

### 2.3.9 Header Type Register (HDR)

Power-up value: 00 H
Size: 8 bits

The board is a single function PCI device.

### 2.3.10 Built-In Self-Test Register (BIST)

Power-up value: 00 H
Size: 8 bits

The Built-In Self-Test register is not implemented in the board.

### 2.3.11 Base Address Registers (BADR)

Address: 10, 14, 18, 1C, 20, 24 (H)

09--0B (H)

0C (H)

0D (H)

0E (H)

0F (H)

Address:

Address:

Address:

Address:

Address:

Power-up value: 000000000 H for each

Size: 32 bits

The Base Address Registers are used by the system BIOS to determine the number, size and base addresses of memory pages required by the board, within host address space.

> Three memory pages are required by the board: one for the module memory space, one for the Global Registers and one for the DMA registers.

Register	Offset	Size	Function
Base Address 0	10 H	64 MB	Module memory space
Base Address 1	14 H	32 KB	DMA registers
Base Address 2	18 H	8 KB	Global registers

Table 2-3 **Base Address Registers Definition** 

Note: Each Base Address Register contains 32 bits. Since the PCI Express board uses 64-bit address space, each memory page covers two base addresses (0 -1, 2-3, 4-5).

Address:

Address:

Address:

Address:

28 (H)

2C (H)

2E (H)

30 (H)

The following table describes the bits of the Base Address Register.

Bit	Description
04-31	Address of memory region (with lower 4 bits removed)
03	Always 1 – memory is prefetchable
01-02	Always 2 – memory may be mapped anywhere within the 64 bit memory space
00	Always 0 – indicates memory space

Table 2-4 **Base Address Register** 

2.3. 12 Calubus Cio i Cililei	2.3.12	Cardbus CIS Pointer
-------------------------------	--------	---------------------

Power-up value: 00000000 H Size: 32 bits

The Cardbus Pointer is not implemented on the board.

2.3.13 Subsystem ID

> Power-up value: 0000 H

Size: 16 bits

2.3.14 Subvendor ID

> Power-up value: 0000 H

Size: 16 bits

**Expansion ROM Base Address Register (XROM)** 2.3.15

> Power-up value: 00000000 H Size: 32 bits

The Expansion ROM Space is not implemented on the board.

page 2 - 6 Excalibur Systems

### 2.3.16 PCI Capabilities Pointer

Power-up value: 50 H
Size: 8 bits

The PCI Capabilities Pointer (Cap. Pointer) indicates the location of the PCI Capabilities Identification (ID) Register. The Capabilities ID Register stores a pointer to a structure within the configuration space. With a known Capabilities ID value, the associated structure can be found during the scanning process.

Address:

Address:

Address:

Address:

Address:

34 (H)

3C (H)

3D (H)

3E (H)

3F (H)

### 2.3.17 Interrupt Line Register (INTLN)

Power-up value: 00 H Size: 8 bits

The Interrupt Line register indicates the interrupt routing for the PCI Controller. The value of this register is system-architecture specific. For *x*86-based PCs, the values in this register correspond with the established interrupt numbers associated with the dual 8259 controllers used in those machines; the values of 1 to F (H) correspond with the IRQ numbers 1 through 15, and the values from 10(H) to FE (H) are reserved. The value of 255 signifies either "unknown" or "no connection" for the system interrupt.

### 2.3.18 Interrupt Pin Register (INTPIN)

Power-up value: 01 H
Size: 8 bits

Set to INTA#

### 2.3.19 Minimum Grant Register (MINGNT)

Power-up value: 00 H Size: 8 bits

The Minimum Grant register is not implemented on the board.

### 2.3.20 Maximum Latency Register (MAXLAT)

Power-up value: 00 H
Size: 8 bits

The Maximum Latency register is not implemented on the board.

## 2.4 Board Global and DMA Registers Memory Space Map

The DMA Registers are mapped as follows.

DMA Registers 7FFF H

Figure 2-2 DMA Registers Memory Space Map

The Global Registers are mapped as follows.



Figure 2-3 Global Registers Memory Space Map

page 2 - 8 Excalibur Systems

### 2.5 Board Global Registers Map

The board global registers reside in the second memory block.

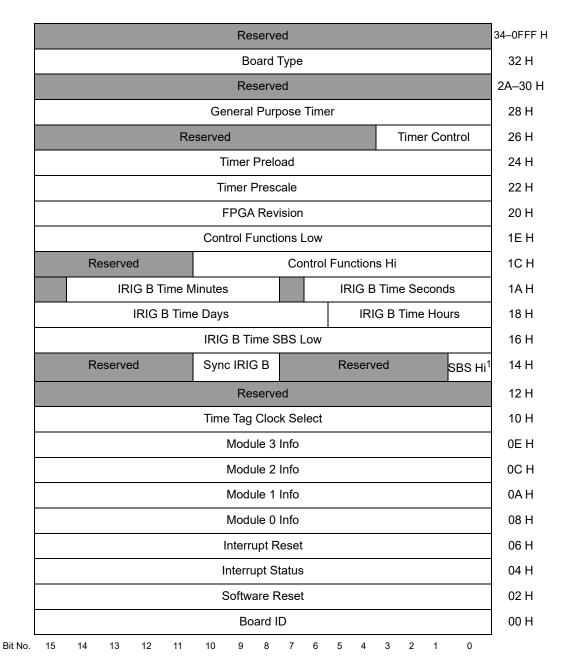


Figure 2-4 Global and IRIG B Registers Map

1. IRIG B Time SBS Hi Register

### 2.5.1 Board Identification Register

Address: 00 (H) Length 16 bits

Read only The Board Identification register comprises the following identification items.

Bit	Description
04-15	Hard coded to the value 8E0 H
00-03	Selected ID See 3.3.1 Select ID DIP Switch [SW1] on page 3-3.

Table 2-5 Board Identification Register

### 2.5.2 Software Reset Register

Address: 02 (H) Length 16 bits

**Read/Write** The Software Reset register performs reset operations of the modules. Individual modules may be reset.

Bit 04, the Global Time Tag reset bit, resets all the module's Time Tag counters.

Bit	Description	
05-15	Reserved – set to 0	
04	Global time tag reset	1 = reset all time tag counters 0 = no effect
03	Module 3 reset	1 = reset module 0 = no effect
02	Module 2 reset	1 = reset module 0 = no effect
01	Module 1 reset	1 = reset module 0 = no effect
00	Module 0 reset	1 = reset module 0 = no effect

Table 2-6 Software Reset Register

### 2.5.3 Interrupt Status Register

Address: 04 (H) Length 16 bits

**Read only** The Interrupt Status register indicates which modules are currently interrupting or if the General Purpose Timer has produced an interrupt.

Bit	Description
05-15	Reserved – set to 0
04	1 = indicates that an interrupt was generated by the General Purpose Timer [See 2.7 Global Timer Registers on page 2-16]
03	1 = indicates that module 3 is interrupting
02	1 = indicates that module 2 is interrupting
01	1 = indicates that module 1 is interrupting
00	1 = indicates that module 0 is interrupting

Table 2-7 Interrupt Status Register

### 2.5.4 Interrupt Reset Register

Address: 06 (H) Length 16 bits

Write only The Interrupt Reset register resets the interrupting modules by writing to the relevant bits of the register.

Bit	Description
05-15	Reserved – set to 0
04	<ul><li>1 = Resets General Purpose Timer interrupt</li><li>0 = No effect</li></ul>
03	1 = Resets module 3 interrupt 0 = No effect
02	1 = Resets module 2 interrupt 0 = No effect
01	1 = Resets module 1 interrupt 0 = No effect
00	1 = Resets module 0 interrupt 0 = No effect

Table 2-8 Interrupt Reset Register

#### Module Info Registers for Modules 0 - 3 2.5.5

Address: 08, 0A, 0C, 0E (H) 16 bits each Length

The Module Info Registers provide identification information for each of the modules.

Bit	Description	
12-15	Module number	00 H = Module 0 Info register 01 H = Module 1 Info register 02 H = Module 2 Info register 03 H = Module 3 Info register
05-11	Reserved – set to 0	
00-04	Module type	24 H = M8K429RT5 module 25 H = M8K1553Px or M8K1760Px module 26 H = M8KMMSI module 27 H = M8K708 module 28 H = M8K825CAN module 29 H = M8KH009 module 2D H = M8KDiscrete module 32 H = M8KSerial module 37 H = M8K717 module 1F H = no module installed

Table 2-9 **Module Info Registers** 

#### **Time Tag Clock Select Register** 2.5.6

Address: 10 (H) Length 16 bits

Read/Write The Time Tag Clock Select Register is used to set either an internal (1 MHz) or external source for the board's Global Time Tag Clock. External Signals are transmitted via connector J1. See 3.4.2 Communications I/O Connector [J1] on page 3-5.

Bit	Description	
01-15	Reserved – set to 0	
00	Time Tag Clock Select	1 = External Source
	-	0 = Internal Source [Default]_

Table 2-10 Time Tag Clock Select Register

page 2 - 12 Excalibur Systems

### 2.6 IRIG B Global Registers

The *EXC-8000PCIeHC* is able to receive and decode standard serial IRIG B time code format signals via connector J1. The signals are 1 KHz carrier wave, sine wave, amplitude modulated, 100 peaks per second. See External Signals in **3.4.2 Communications I/O Connector [J1]** on page 3-5.

The IRIG B signal, which contains 3 types of words within each Time Code Frame, can be used to synchronize the Time Tags of the modules on the board.

1<sup>st</sup> Word Time-of-year in binary coded decimal (BCD) notation in hours, minutes and seconds.

2<sup>nd</sup> Word Set of bits reserved for decoding various control,

identification and other special purpose functions.

3<sup>rd</sup> Word Seconds-of-day weighted in straight binary seconds (SBS) notation

These three words can be stored and displayed in the IRIG B global registers 14 - 1E (H).

See Figure 2-4 Global and IRIG B Registers Map on page 2-9 for the location of the registers on the memory map.

**Note:** The synchronization of IRIG B time can take up to two seconds. IRIG B functions are meant to be used on an occasional basis, not on a constant basis.

#### Sync IRIG B Register 2.6.1

Address: 14 (H) **Bits** 08 - 10

Read/Write The 3-bit Sync IRIG B register controls the synchronization of a module's Time Tags relative to the IRIG B input signal and the display of the IRIG B time within the IRIG B time registers.

Bit	De	scription
10	1	Set by board to indicate that the current IRIG B time has been stored in the IRIG B registers
	0	No IRIG B time has been stored in the IRIG B registers.  This bit must be reset by the user after the board has written a '1'.
09	1	Stores and displays the IRIG B time and control functions into the 6 IRIG B registers (14-1E [H]) corresponding to the previous valid IRIG B message. If bit 08 is set, then the IRIG B time will be stored at the same time that the Time tags are reset. To calculate the realtime to which the Time tags are synchronized the user will need to <b>add</b> '1' to the value of the IRIG B time stored into these registers.
	0	The previous valid IRIG B message should not be stored in the IRIG B registers.  This bit will be automatically reset by the board after the storage of the IRIG B time.
08	1	Resets and synchronizes Time Tags of all the modules to the next rising edge of the on-time Reference Point <b>Pr</b> of the IRIG B signal. Also sets Bit 09 to a value of '1' in order to store and display the IRIG B time and control functions into the 6 IRIG B registers.
	0	No reset/synchronization of Time tags relative to the <b>Pr</b> of the IRIG B signal. This bit will be automatically reset by board after reset of time tags

#### Table 2-11 Sync IRIGB Register

Note: All bits are read and write.

#### 2.6.2 IRIG B Time SBS High Register

Address: 14 (H) Bit

The IRIG B Time SBS High register contains the most significant bit (MSB) of the Read only 17 bit straight binary representation of the seconds-of-day code word within the IRIG B message.

#### IRIG B Time SBS Low Register 2.6.3

Address: 16 (H) Bits 15 - 0

The IRIG B Time SBS Low register contains the lower 16 bits of the 17 bit Read only straight binary representation of the seconds-of-day code word within the IRIG B message.

#### 2.6.4 **IRIG B Time Days Register**

18 (H) **Bits** 15 - 6

Address:

The IRIG B Time Days register contains the days value of the BCD time-of-year Read only subword within the IRIG B coded message.

page 2 - 14 Excalibur Systems

2.6.5 IRIG B Time Hours Register

Address: 18 (H) Bits 5 – 0

**Read only** The IRIG B Time Hours register contains the hours value of the BCD time-of-year subword within the IRIG B coded message.

2.6.6 IRIG B Time Minutes Register

Address: 1A (H) Bits 14 – 8

**Read only** The IRIG B Time Minutes register contains the minutes value of the BCD time-of-year subword within the IRIG B coded message.

2.6.7 IRIG B Time Seconds Register

Read only

Address: 1A (H) Bits 6 – 0

Address:

Bits

20 (H)

15 - 0

**Read only** The IRIG B Time Seconds register contains the seconds value of the BCD time-of-year subword within the IRIG B coded message.

2.6.8 Control Functions Registers Hi Register Address: 1C (H) / Bits 10 – 0
Low Register Address: 1E (H) / Bits 15 – 0

Read only The IRIG B time code formats reserve 27 bits known as Control Functions. The Control Functions are for user-defined encoding of various control, identification or other special purpose functions. No standard coding system exists. The control bits may be programmed in any predetermined coding system.

2.6.9 FPGA Revision Register

The FPGA Revision register contains the FPGA revision of the board. For example, if the hex value of the register is 0015 H, the FPGA revision is 1.5.

### 2.7 Global Timer Registers

See Figure 2-4 Global and IRIG B Registers Map on page 2-9 for location of the registers on the memory map.

### 2.7.1 Timer Prescale Register

Address: 22 (H) Bits 15 – 0

Read/Write The Timer Prescale Register defines the resolution of the General Purpose Timer. It is based on the Global Time Tag Clock (nominally 1 MHz) and thus will give the General Purpose Timer resolution as follows:

Timer Prescale Register Value (DEC)	General Purpose Time Resolution (μsec)
0 or 1	1 (default)
2	2
3	3
•	•
•	•
•	•
10	10
•	•
•	•
•	•
65535	65535

Table 2-12 Timer Prescale/General Purpose Timer Resolution

**Note:** The Timer Prescale register can only be changed when the timer has been stopped.

### 2.7.2 Timer Preload Register

Address: 24 (H) Bits 15 – 0

Read/Write The value stored in the Timer Preload Register sets the starting count value for the General Purpose Timer from which it will start to count down. The Timer Preload Register can only be changed while the timer is stopped and has a maximum count value of 65535.

**Note:** The General Purpose Timer will not start counting if a value of zero is stored into the Timer Preload Register.

Default value: 00 00

### 2.7.3 Timer Control Register

Address: 26 (H) Bits 3 – 0

**Read/Write** The Timer Control Register is used to control the General Purpose Timer register. The value stored in bits 01 to 03 take effect when the General Purpose timer reaches a value of zero. Bit 00 is used to start and stop the General Purpose

page 2 - 16 Excalibur Systems

Timer. The values of bits 01 - 03 can only be changed when the General Purpose Timer register is stopped.

Default value: 00 00

Bit	Description		
04-15	Reserved - set to 0		
03	Global reset on count completed	1 0	Causes global reset of all installed modules No effect
02	Interrupt on count completed	1	Output an interrupt (see <b>2.5.3 Interrupt Status Register</b> on page 2-11) No effect
01	Reload mode	1 0	Reload mode Non-reload/One-shot mode
00	Start/Stop	1 0	Start Stop

Table 2-13 Timer Control Register

#### 2.7.4 General Purpose Timer Register

Address: 28 (H) Bits 15 – 0

#### Read Only

The General Purpose Timer Register stores the current count value of the General Purpose Timer. The General Purpose Timer is controlled by the Timer Control Register. When the General Purpose Timer is started it will count down to zero, at which point either an interrupt can be generated and or all installed modules can be reset.

If the General Purpose Timer is in reload mode then the current value in Timer Preload Register will be stored into the General Purpose Timer and the timer will start to count down from this value.

If the General Purpose Timer is in non-reload / one shot mode, when it reaches zero it will stop and a value of zero will be displayed in the General Purpose Timer Register. In this case bit 00 (Start/Stop bit) of the Timer Control Register will automatically be set to zero in this case. If the General purpose Timer Register is then started it will start to count from the current Timer Preload Register value automatically (without the need to do a write to the Timer Preload Register).

At any point in time, the General Purpose Timer can be stopped at the current count value. When a start is then issued, the General purpose Timer will start to count down from this current count value. If the user wishes to stop the counter and start from the original preload value or from a new preload value, this value will need to be rewritten into the Timer Preload register prior to the restarting of the General Purpose Timer register.

Note: The maximum clock period of the General Purpose Timer is 4295 seconds (1 hour, 11min & 35 Seconds).

### 2.7.5 Board Type Register

Address: 32 (H) Bits 15 – 0

Read Only The Board Type register contains the board's model number.

Bit	Description	
00-15	Hard coded to the value E801 H	

Table 2-14 Board Type Register

### 2.8 Module Memory Space Map

The module memory space map resides in the first memory block. Each module is allocated a space of 128 KB which is mapped as shown in **Figure 2-5 Module Memory Space Map**. (See **Chapter 4 Ordering Information** for information on the available modules for this carrier board.)

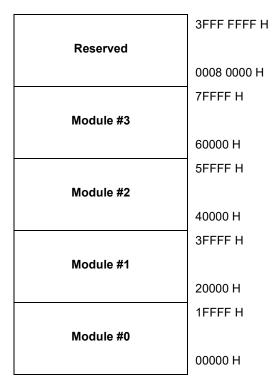


Figure 2-5 Module Memory Space Map

# 3 Mechanical and Electrical Specifications

Chapter 3 describes the mechanical and electrical specifications of the EXC-8000PCIeHC carrier board. The following topics are covered:

3.1	Board	d Layout	3-2
3.2	Led Ir	Indicators	3-3
3.3	DIP S	Switches	3-3
	3.3.1	Select ID DIP Switch [SW1]	3-3
3.4	Conn	nectors	3-4
	3.4.1	SATA Connector [J3]	3-4
	3.4.2	Communications I/O Connector [J1]	3-5
		3.4.2.1 External Signals	3-10
		3.4.2.2 Adapter Cable	3-12
		3.4.2.3 Adapter Cable EXC-8000CON Assembly	3-13
	3.4.3	PCI Express Bus Edge Connector	3-14
		3.4.3.1 Synchronizing with an External Source	3-15
		3.4.3.2 Synchronizing Between Boards	
3 5	Powe	or Requirements	3-16

# 3.1 Board Layout

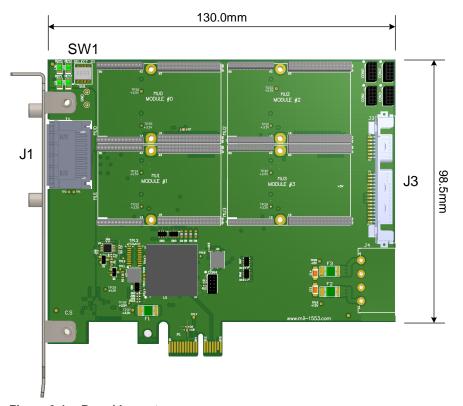


Figure 3-1 Board Layout

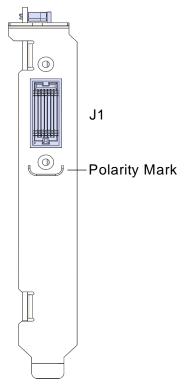


Figure 3-2 Board PC Bracket – Front View

page 3 - 2 Excalibur Systems

### 3.2 Led Indicators

The board contain four LEDs.

LED	Name	Indication
LD0	RDY0	Module 0 Ready
LD1	RDY1	Module 1 Ready
LD2	RDY2	Module 2 Ready
LD3	RDY3	Module 3 Ready

Table 3-1 Led Indicators

### 3.3 DIP Switches

The board contains one DIP switch (SW1).

### 3.3.1 Select ID DIP Switch [SW1]

This four contact DIP switch provides the board's 'Selected ID.' It represents a four bit number of which position #1 is the most significant bit. When a specific bit of the switch is:

- Off a value of "1" will be set for that bit
- On a value of "0" will be set for that bit

### **Multiple Board Applications**

To provide a unique Selected ID, to identify a board by the application software in a multiple board application, the DIP switch should be set differently for each board in the same computer. For example:

	For Board ID#1	For Board ID#3
Bit 1	On	On
Bit 2	On	On
Bit 3	On	Off
Bit 4	Off	Off

Table 3-2 DIP Switch Settings for Unique Selected ID

For multiple board applications, each board's device number may be set by using the Excalibur configuration utility program provided with the drivers, and by setting the Unique ID to match that set on the DIP switch shown in Figure 3-3.

Select ID	Bit 1	Bit 2	Bit 3	Bit 4
0	0	0	0	0
1	0	0	0	1
2	0	0	1	0
3	0	0	1	1

Table 3-3 Selected ID Bits




Figure 3-3 DIP Switch SW1 with All Switches Set to ON (Selected ID#0)

### 3.4 Connectors

### 3.4.1 SATA Connector [J3]

The power section of this connector mates with the standard PC SATA power supply cable. The signal pins are not connected on the board. See **1.2 Installation** on page 1-6.

Note: The EXC-8000PCIeHC board will not work without the power cable connected.

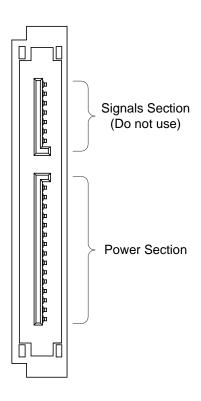

		_
Pin	Signal	
S1	N/C <sup>1</sup>	
S2	N/C	
S3	N/C	
S4	N/C	
S5	N/C	
S6	N/C	
<b>S</b> 7	N/C	
P1	N/C	
P2	N/C	
P3	N/C	
P4	GND	
P5	GND	
P6	GND	
P7	+5V	
P8	+5V	
P9	+5V	
P10	N/C	
P11	N/C	
P12	N/C	
P13	+12V	
P14	+12V	(Optional, for future use)
P15	+12V	
Table 3-4	15+7-Piı	n Male SATA Connec

Figure 3-4 15+7-Pin Male SATA Connector [J3] – Front View

Table 3-4 15+7-Pin Male SATA Connector Pinouts

1. N/C = Not connected.

### 3.4.2 Communications I/O Connector [J1]

The *EXC-8000PCIeHC* has one 160-pin HD, female I/O connector mounted on the front panel, P/N: Samtec SEAF8-20-1-S-08-2-RA. Adapter cables can be ordered from Excalibur that terminate in separate connectors for each module installed on the board. See **3.4.2.2 Adapter Cable** on page 3-12.

For those who would like to build their own adapter cable, the mating connector assembly, P/N: Excalibur EXC-8000CON, can be ordered separately. The EXC-8000CON assembly includes the mating connector (P/N: Samtec SEAM8-20-S05.0-S-08-2-K) soldered on to a flexible PCB. See **3.4.2.3** Adapter Cable EXC-8000CON Assembly on page 3-13.

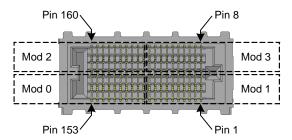


Figure 3-5 J1 Connector – Front View

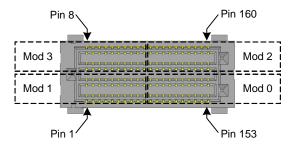


Figure 3-6 J1 Mating Connector – Front View

The pinouts of the J1 connector vary depending on the modules installed on the board. Each of the four sections of the J1 connector carries the signals of one of the board's removable modules. Connector J1 also transfers the External Signals.

Tables 3-5 through 3-10 list the pinouts for the J1 connector and the pinouts of the terminating connector of Excalibur's adapter cable.

These tables have two purposes: (1) To identify the signal on each pin of the J1 connector and (2) to build an adapter cable using the Excalibur's mating connector assembly (P/N: EXC-8000CON). The letter-number combinations in the left side of these tables specify the soldering hole numbers in the mating connector assembly. These letter-number combinations are for building an adapter cable. The numbers in parentheses specify the pin numbers of the J1 connector.

For more information on the adapter cable, see 3.4.2.2 Adapter Cable on page 3-12.

 $Table \ 3-5 \ lists \ the \ pinouts \ for \ the \ \textit{M8K429RT5}, \ \textit{M8K717}, \ \textit{M8K825CAN}, \ \textit{M8KDiscrete}, \ \textit{M8KSerial} \ \text{and} \ \textit{M8KMMSI} \ \text{modules}.$ 

P1 Mating Connector Through-hole Soldering Pad# and J1 On-board Connector Pin# (in Parenthesis)						Module Signal Names							
Modules 0 and 4	Modules 1 and 5	Modules 2 and 6	Modules 3 and 7		HDB 15-pin Adapter Cable Pin#	M8K429RT5	M8K717	M8K825CAN	M8KDiscrete	M8KSerial RS-232	M8KSerial RS-422	M8KSerial RS-485	M8KMMSI
A1L (100)	B1L (4)	C1L (102)	D1L (6)	:	2	CH0L	N/C	CH0L	DIO_0	N/C	Ch0_422T_H	Ch0_485_H	CH0L
A1H (108)	B1H (12)	C1H (110)	D1H (14)	;	3	СН0Н	N/C	СН0Н	DIO_1	Ch0_232T	Ch0_422T_L	Ch0_485_L	СН0Н
A2L (98)	B2L (2)	C2L (117)	D2L (21)		4	CH1L	N/C	CH1L	DIO_2	Ch0_232R	Ch0_422R_H	N/C	CH1L
A2H (106)	B2H (10)	C2H (125)	D2H (29)		5	CH1H	N/C	CH1H	DIO_3	N/C	Ch0_422R_L	N/C	CH1H
A3L (115)	B3L (19)	C3L (119)	D3L (23)		7	CH2L	N/C	CH2L	DIO_4	GND	GND	GND	CH2L
A3H (123)	B3H (27)	C3H (127)	D3H (31)	;	8	CH2H	N/C	CH2H	DGND_04	SHIELD	SHIELD	SHIELD	CH2H
A4L (138)	B4L (42)	C4L (142)	D4L (46)		9	CH3L	N/C	CH3L	DIO_5	N/C	Ch1_422T_H	Ch1_485_H	CH3L
A4H (130)	B4H (34)	C4H (134)	D4H (38)		10	СНЗН	N/C	СНЗН	DIO_6	Ch1_232T	Ch1_422T_L	Ch1_485_L	СНЗН
A5L (155)	B5L (59)	C5L (159)	D5L (63)		11	CH4L	Ch717TxL	CH4L	DIO_7	Ch1_232R	Ch1_422R_H	N/C	CH4L
A5H (147)	B5H (51)	C5H (151)	D5H (55)		12	CH4H	Ch717TxH	CH4H	DIO_8	N/C	Ch1_422R_L	N/C	CH4H
A6L (140)	B6L (44)	C6L (157)	D6L (61)		13	Reserved	Ch717RxL	Reserved	DIO_9	GND	GND	GND	CH5L
A6H (132)	B6H (36)	C6H (149)	D6H (53)		14	Reserved	Ch717RxH	Reserved	DGND_59	SHIELD	SHIELD	SHIELD	CH5H
A7 (GND)	B7 (GND)	C7 (GND)	D7 (GND)		6	GND	GND	GND	GND	GND	GND	GND	GND
SHIELD Pad	SHIELD Pad	SHIELD Pad	SHIELD Pad		1	SHIELD	SHIELD	SHIELD	SHIELD	SHIELD	SHIELD	SHIELD	SHIELD
					15	N/C	N/C	N/C	N/C	N/C	N/C	N/C	N/C

Table 3-5 J1 Connector Pinouts for M8K429RT5, M8K717, M8K825CAN, M8KDiscrete, M8KSerial and M8KMMSI Modules

Table 3-6 lists the pinouts for the *M8K1553Px*, *M8K1760Px* and *M8K708* modules.

P1 Mating Connector Through-hole Soldering Pad# and J1 On-board Connector Pin# (in Parenthesis)			Twinax Adapter Cable Connector	Adapter RT Lock Connector Cable Pin# 1, 2, 3		Module Signal Names		
Modules 0 and 4	Modules 1 and 5	Modules 2 and 6	Modules 3 and 7			M8K1553Px/ M8K1760Px	M8K1553PxS/ M8K1760PxS	M8K708
A1L (100)	B1L (4)	C1L (102)	D1L (6)	Inner Sheath		BUS_AL	BUS_AL	CH0_L
A1H (108)	B1H (12)	C1H (110)	D1H (14)	Center Pin		BUS_AH	BUS_AH	СН0_Н
A2L (98)	B2L (2)	C2L (117)	D2L (21)		8		RTA0	
A2H (106)	B2H (10)	C2H (125)	D2H (29)		7		RTA1	
A3L (115)	B3L (19)	C3L (119)	D3L (23)		6		RTA2	
A3H (123)	B3H (27)	C3H (127)	D3H (31)		5		RTA3	
A4L (138)	B4L (42)	C4L (142)	D4L (46)		4		RTA4	
A4H (130)	B4H (34)	C4H (134)	D4H (38)		3		RTAPRTY	
A5L (155)	B5L (59)	C5L (159)	D5L (63)	Inner Sheath		BUS_BL	BUS_BL	CH1_L
A5H (147)	B5H (51)	C5H (151)	D5H (55)	Center Pin		BUS_BH	BUS_BH	CH1_H
A6L (140)	B6L (44)	C6L (157)	D6L (61)		2		RTALOCK	
A6H (132)	B6H (36)	C6H (149)	D6H (53)		1		GND	
A7 (GND)	B7 (GND)	C7 (GND)	D7 (GND)					
SHIELD Pad	SHIELD Pad	SHIELD Pad	SHIELD Pad	Connector Body		SHIELD Pad	SHIELD Pad	SHIELD Pad

Table 3-6 J1 Connector Pinouts for M8K1553Px, M8K1760Px and M8K708 Modules

- 1. For M8K1553PxS and M8K1760PxS (single function modules) only.
- 2. Pin 9 of the RT Lock Connector is not connected.
- 3. Not supplied with standard cable.

Table 3-7 lists the pinouts for the M8KH009 and M8K1553MCH modules.

		rough-hole Solo ctor Pin# (in Pa			Twinax Adapter Cable Connector <sup>1</sup>	Module Signal Names		
	Double-Sized Module in Module Positions 0 and 1 Module Positions 2 and 3							
Module Position 0	Module Position 1	Module Position 2	Module Position 3			M8KH009	M8K1553MCH	
	B1L (4)		D1L (6)		Inner Sheath	Data Bus A Low	Reserved	
	B1H (12)		D1H (14)		Center Pin	Data Bus A High	Reserved	
	B2L (2)		D2L (21)		Inner Sheath	Clock Bus A Low	Reserved	
	B2H (10)		D2H (29)		Center Pin	Clock Bus A High	Reserved	
	B3L (19)		D3L (23)			Shield	Reserved	
	B3H (27)		D3H (31)			Ground	Reserved	
A4L (138)		C4L (142)			Inner Sheath	Data Bus B Low	Bus B Low	
A4H (130)		C4H (134)			Center Pin	Data Bus B High	Bus B High	
A5L (155)		C5L (159)			Inner Sheath	Clock Bus B Low	Bus A Low	
A5H (147)		C5H (151)			Center Pin	Clock Bus B High	Bus A High	
A6L (140)		C6L (157)				Shield	Reserved	
A6H (132)		C6H (149)				Reserved	Ground	
A7 (Ground)	B7 (Ground)	C7 (Ground)	D7 (Ground)					
Shield Pad	Shield Pad	Shield Pad	Shield Pad		Connector Body	Shield Pad	Shield Pad	

Table 3-7 J1 Connector Pinouts for Double-Sized M8KH009 and M8K1553MCH Modules

1. For more information on the adapter cable, see 3.4.2.2 Adapter Cable on page 3-12.

Table 3-8 lists the pinouts for the M8KADDA module.

P1 Mating Connector Through-hole Soldering Pad# and J1 On-board Connector Pin# (in Parenthesis)				Module Signal Names						
Module 0	Module 1	Module 2	Module 3	HDB 15-pin Adapter Cable Connector Pin#	M8KADDA-P1 (DAC)		M8KADDA-P2 (ADC)		M8KADDA-P3 (DAC & ADC)	
					Single Ended	Differential	Single Ended	Differential	Single Ended	Differential
A1L(100)	B1L(4)	C1L(102)	D1L(6)	2	Channel 0 Output	Channel 0/1 Output High	Channel 0 Input	Channel 0/1 Input High	Channel 0 Output	Channel 0/1 Output High
A1H(108)	B1H(12)	C1H(110)	D1H(14)	3	Channel 1 Output	Channel 0/1 Output Low	Ground Reference Input	Channel 0/1 Input Low	Channel 1 Output	Channel 0/1 Output Low
A2L(98)	B2L(2)	C2L(117)	D2L(21)	4	Channel 2 Output	Channel 2/3 Output High	Channel 2 Input	Channel 2/3 Input High	Channel 2 Output	Channel 2/3 Output High
A2H(106)	B2H(10)	C2H(125)	D2H(29)	5	Channel 3 Output	Channel 2/3 Output Low	Ground Reference Input	Channel 2/3 Input Low	Channel 3 Output	Channel 2/3 Output Low
A3L(115)	B3L(19)	C3L(119)	D3L(23)	7	Channel 4 Output	Channel 4/5 Output High	Channel 4 Input	Channel 4/5 Input High	Channel 4 Input	Channel 4/5 Input High
A3H(123)	B3H(27)	C3H(127)	D3H(31)	8	Channel 5 Output	Channel 4/5 Output Low	Ground Reference Input	Channel 4/5 Input Low	Ground Reference Input	Channel 4/5 Input Low
A4L(138)	B4L(42)	C4L(142)	D4L(46)	9	Channel 6 Output	Channel 6/7 Output High	Channel 6 Input	Channel 6/7 Input High	Channel 6 Input	Channel 6/7 Input High
A4H(130)	B4H(34)	C4H(134)	D4H(38)	10	Channel 7 Output	Channel 6/7 Output Low	Ground Reference Input	Channel 6/7 Input Low	Ground Reference Input	Channel 6/7 Input Low
A5L(155)	B5L(59)	C5L(159)	D5L(63)	11	Channel 8 Output	Channel 8/9 Output High	Channel 8 Input	Channel 8/9 Input High	Channel 8 Input	Channel 8/9 Input High
A5H(147)	B5H(51)	C5H(151)	D5H(55)	12	Channel 9 Output	Channel 8/9 Output Low	Ground Reference Input	Channel 8/9 Input Low	Ground Reference Input	Channel 8/9 Input Low
A6L(140)	B6L(44)	C6L(157)	D6L(61)	13	Ground	Ground	Ground	Ground	Ground	Ground
A6H(132)	B6H(36)	C6H(149)	D6H(53)	14	Ground	Ground	Ground	Ground	Ground	Ground
A7 (Ground)	B7 (Ground)	C7 (Ground)	D7 (Ground)	6	Ground	Ground	Ground	Ground	Ground	Ground
Shield Pad	Shield Pad	Shield Pad	Shield Pad	1	Shield	Shield	Shield	Shield	Shield	Shield
				15	N/C	N/C	N/C	N/C	N/C	N/C

Table 3-8 J1 Connector Pinouts for the M8KADDA Module

### 3.4.2.1 External Signals

Table 3-9 lists the pinouts for the External Signals. Table 3-10 describes the External Signals.

An adapter cable with an External Signals Connector can be ordered from Excalibur. (It is not included with a standard adapter cable unless specifically ordered.) For more information on the adapter cable, see **3.4.2.2 Adapter Cable** on page 3-12.

Table 3-9 lists the pinouts for the External Signals. Table 3-10 describes the External Signals.

External Signal Name	J1 Connector Pin# and Mating Connector Soldering Holes	9-Pin, D-Type, Male External Signals Connector Pin#
GND	A7, B7, C7, D7 (GND)	4, 7
SHIELD	SHIELD pad	9, Body
EXTTCLKO	A8 (83)	3
EXTTCLKI	A9 (84)	1
EXTTRSOn	B8 (75)	8
EXTTRSTIn	B9 (76)	2
N/C	C8 (86)	-
IRIGBIN	C9 (85)	6
N/C	D8 (78)	-
Reserved	D9 (77)	5

Table 3-9 J1 Connector Pinouts for External Signals

Signal	Description
GND	Provides ground reference for the digital signal connections.
SHIELD	Provided for a cables shield connection. This signal is connected to the case of the computer through the boards brackets or panel.
EXTTCLKO	Global Time Tag Clock TTL Output (1 MHz). This signal is the Global Clock that is supplied to all the modules for their Time Tags. Use the signal to synchronize other boards or systems to the Time Tags that are implemented on the modules. The source of this clock is either the External Time Tag Clock EXTTCLKI <sup>2</sup> or the Internal Time Tag Clock. See 2.5.6 Time Tag Clock Select Register on page 2-12.
EXTTCLKI	<b>External Time Tag Clock Input.</b> This signal supplies an external global clock for the Time Tags of all the modules. Use this signal to synchronize the Time Tags that are implemented on the modules <sup>1</sup> to other boards or systems. <sup>2</sup> See <b>2.5.6 Time Tag Clock Select Register</b> on page 2-12. This signal is a standard TTL input (Vih_min = 2.0V) with a nominal 1 MHz clock of 50% duty cycle (+/-10%) in reference to the ground pin. Our internal Time Tag clock source has a 50 ppm stability.
EXTTRSOn	Global Time Tag Reset TTL Output. This low active signal is activated by either the internal Global Time Tag signal (see 2.5.2 Software Reset Register on page 2-10) or from the External Time Tag signal (EXTTRSOn). <sup>2</sup> Use the signal to synchronize other boards or systems to the Time Tags that are implemented on the modules. <sup>1</sup>
EXTTRSTIn	<b>External Time Tag Reset TTL Input.</b> Use this low active pulsed signal (minimum 100 nsec.wide) to simultaneously reset the Time Tags of all the modules from an external source. Use the signal to synchronize these Time Tags to other boards or systems. <sup>2</sup>
IRIGBIN	<ul> <li>IRIG B120 Input. The signal should have the following specifications:</li> <li>B = 100 pulses per second (PPS), 10 msec count</li> <li>1 = Sine wave carrier, amplitude modulated, with a 3:1 modulation ratio at 3Vpp typical amplitude</li> <li>2 = 1 kHz carrier wave (1 msec resolution)</li> <li>0 = Binary Coded Decimal (BCD) time-of-year code word Control Functions (CF) depending on the user application Straight Binary Second (SBS) of day (0 – 86400)</li> </ul>

#### Table 3-10 External Signal Descriptions

- 1. See the manual for each module for a description of how the Time Tag clock is implemented, if used, for that module.
- $\hbox{See 3.4.3.1 Synchronizing with an External Source on page $3$-$15 and $3$.4.3.2 Synchronizing Between Boards on page $3$-$16}.$

#### 3.4.2.2 Adapter Cable

An adapter cable can be ordered from Excalibur that terminates in separate connectors for each module installed on the board. Each connector carries the signals for one of the board's modules. The terminating connector for most modules is a standard 15-pin, high density, D-type, female connector. See Figure 3-7.

The *M8K1553Px*, *M8K1760Px* and *M8K708* modules terminate in two female twinax connectors (Trompeter CJ70 or equivalent) for Bus A and Bus B. See Figure 3-8. The cable is 0.5 meter in length. The twinax connector mates, for example, with a Trompeter PL75 male twinax connector. The mating connector is not supplied by Excalibur.

For boards with an *M8K1553PxS* module, an adapter cable can be ordered with an additional standard 9-pin, D-type, male connector for the RT Lock signals. See Figure 3-9. The RT Lock Connector does not come by default with the supplied cable.

The adapter cable can also be ordered with an External Signal Connector. An adapter cable with an External Signal Connector can be ordered from Excalibur. The External Signal Connector is a standard 9-pin, D-type, male connector. See Figure 3-9.

Adapter cable pinouts are listed together with the J1 connector pinouts in **3.4.2** Communications I/O Connector [J1] on page 3-5.




Figure 3-7 15-Pin Female I/O Connector – Front View

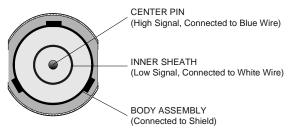


Figure 3-8 Twinax I/O Connector – Front View




Figure 3-9 9-Pin Male Connector – Front View

page 3 - 12 Excalibur Systems

#### 3.4.2.3 Adapter Cable EXC-8000CON Assembly

The Adapter Cable has an EXC-8000CON assembly that mates with the J1 connector. This describes how to assemble the connector containing the EXC-8000CON assembly. This is required if you want to build your own adapter cable.

#### To assemble the connector containing the EXC-8000CON assembly:

1. Figures 3-10 and 3-11 show both sides of the EXC-8000CON assembly. Figure 3-12 shows the rear side with the soldering hole numbers. Solder the adapter cable wires inside of the holes in Figure 3-12 according to the pinouts in Tables 3-5, 3-6 and 3-9.

**Note:** The soldering holes with circles around them are the **high** pins. For example, the soldering hole A3H (listed in Table 3-5) refers to the top-left soldering hole in section A. See Figure 3-12.

- 2. Fold the EXC-8000CON assembly and insert it into the connector hood. See figures 3-13 and 3-14. (These figure do not show the soldered wires.)
- 3. Close the connector hood and fasten the screws. See Figure 3-15.

Note: When connecting the adapter cable to the J1 connector, make sure to align the polarity mark on the EXC-8000CON connector with the polarity mark under the J1 connector. See Figures 3-2, 3-10 and 3-15.

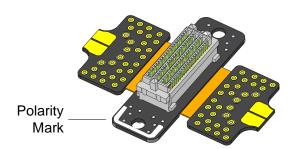


Figure 3-10 EXC-8000CON Assembly – Front View



Figure 3-11 EXC-8000CON Assembly – Rear View

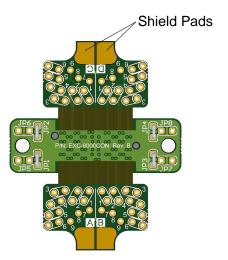


Figure 3-12 EXC-8000CON Assembly –
Rear View with Soldering Holes

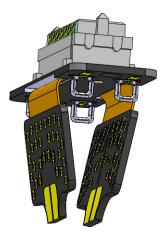


Figure 3-13 EXC-8000CON Assembly Folded

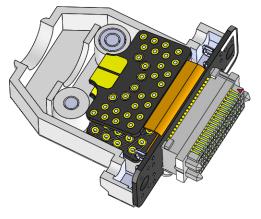


Figure 3-14 EXC-8000CON Assembly Inserted Into Hood

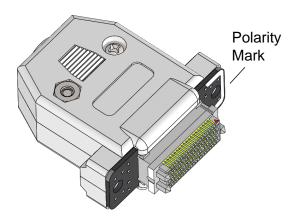


Figure 3-15 Connector Hood Closed

## 3.4.3 PCI Express Bus Edge Connector

	Si	de B Connector	Side A Connector				
Pin	Signal Name	Description	Signal Name	Description			
1	(+12V)	N/C	PRSNT#1	Hot plug presence detect			
2	(+12V)	N/C	(+12V)	N/C			
3	RSVD	Reserved	(+12V)	N/C			
4	GND	Ground	GND	N/C			
5	(SMCLK)	N/C	(JTAG2)	N/C			
6	(SMDAT)	N/C	(JTAG3)	N/C			
7	GND	Ground	(JTAG4)	N/C			
8	+3.3V	+3.3 volt power	(JTAG5)	N/C			
9	(JTAG1)	N/C	+3.3V	+3.3 volt power			
10	(3.3Vaux)	N/C	+3.3V	+3.3 volt power			
11	(WAKE#)	N/C	PWRGD	Power good			
	CONNECTOR KEY						
12	RSVD	Reserved	GND	Ground			
13	GND	Ground	REFCLK+	Reference clock,			
14	HSOp	Transmitter lane,	REFCLK-	differential pair			
15	HSOn	differential pair	GND	Ground			
16	GND	Ground	HSIp	Receiver lane,			
17	PRSNT#2	Hot plug detect	HSIn	differential pair			
18	GND	Ground	GND	Ground			

Table 3-11 PCI Express Bus Edge Connector Pinouts

N/C = Not connected on board

page 3 - 14 Excalibur Systems

#### 3.4.3.1 Synchronizing with an External Source

To synchronize a single board to an external system, the external clock source and the external reset must be connected to the EXTTCLKI and the EXTTRSTIn signals respectively.

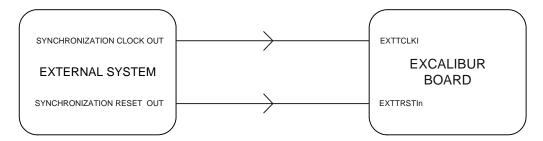


Figure 3-16 Synchronization of a Single Board to an External System

To synchronize an external system to a single *EXC-8000PCIeHC* board, the EXTTCLKO and the EXTTRSOn signals need to be connected to the external clock source and the external reset respectively.

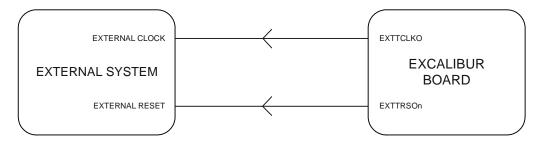


Figure 3-17 Synchronization of an External System to a Single Board

*Warning:* The synchronization clock and reset signals may be connected to multiple targets to achieve system wide synchronization.

#### 3.4.3.2 Synchronizing Between Boards

To synchronize multiple boards the EXTTCLKO and the EXTTRSOn signals of one board need to be connected to all the EXTTCLKI and the EXTTRSTIn signals respectively, of the remaining boards.

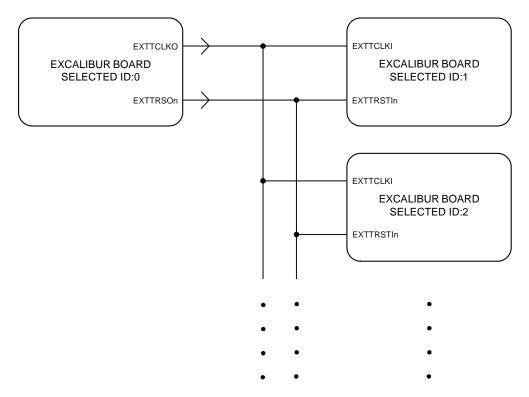


Figure 3-18 Synchronization Between Boards

## 3.5 Power Requirements

The standby power requirements, without any modules installed, are:

+3.3V @ 250mA

The power for the board is drawn from the PCI Express bus edge connector and the power for its modules is drawn from the power connector [J3]. See **3.4.1 SATA** Connector [J3] on page 3-4.

The final power requirements will depend on how many and which modules are installed. To calculate the exact board power requirements, see the specific module's user's manual.

page 3 - 16 Excalibur Systems

Chapter 4 Ordering Information

# 4 Ordering Information

Chapter 4 explains which options to indicate when ordering.

Basic Part #	Option	Description
EXC-8000PCIeHC/xx		Multiprotocol carrier board for PCI Express (PCIe) compatible systems. Replace 'xx' with the module codes of the modules you want. See Table 4-2. For part number examples, see 4.1 Part Number Examples on page 4-3.
		When ordering the board without modules, leave the ' $\mathbf{x}\mathbf{x}$ ' in the part number.
		When ordering a module separate from a carrier board, use the module part # in Table 4-2. See the user's manual of the module for complete ordering information.
	-E	Extended temperature/ruggedized version. All the modules come with a ruggedized, extended temperature option (-40° to + 85°C).
	-001	With conformal coating
EXC-8000CON		J1 mating connector assembly. <b>Note:</b> This is part of the adapter cable, but can also be ordered separately.

Table 4-1 Ordering Information

#### Note:

- For adapter cable part numbers, see **4.1 Adapter Cable Ordering Information** on page 4-4.
- External Loopback test connectors are available for most configurations. Contact Excalibur Sales for more information.

Table 4-2 lists the part numbers for the available modules.

Protocol Type	Module Part #	Module Code	Description
ARINC 429	M8K429RT5	Α0	ARINC 429 module with 5 channels, software selectable as transmit or receive.
ARINC 708/453	M8K708	C0	ARINC 708/453 with 2 channels, software selectable as transmit or receive.
ARINC 717	M8K717-Nx	Nx	ARINC 717 module with 2 channels, one transmit and one receive.  Replace 'Nx' with one of the following:  N1 = HBP transmit channel  N2 = BPRZ transmit channel
ARINC 825	M8K825CAN-S5	S5	ARINC 825 module with 5 channels.
MIL-STD-1553	M8K1553Px	F0	MIL-STD-1553 multi-function module. selectable as Transformer or Direct coupled via a DIP switch.
MIL-STD-1553 Monitor Only	M8K1553PxM	G0	MIL-STD-1553 multi-function module for monitoring only.

Table 4-2 Module Codes

Chapter 4 Ordering Information

Protocol Type	Module Part #	Module Code	Description
MIL-STD-1553 Single Function	M8K1553PxS	T <i>x</i>	MIL-STD-1553 single function module. Replace ' <b>Tx</b> ' with one of the following: <b>T1</b> = PxS Transformer coupled mode <b>T2</b> = PxS Direct coupled mode
MIL-STD-1553 Single Function Monitor Only	M8K1553PxSM	Vx	MIL-STD-1553 module for monitoring only. Replace 'Vx' with one of the following: V1 = PxS Transformer coupled mode V2 = PxS Direct coupled mode
MIL-STD-1553 MCH	M8K1553MCH	E0	MIL-STD-1553 MCH module. This is a double-sized module and occupies two modules locations. It can be installed in module locations 0–1, 2–3 or 4-5 (not 6–7).
MIL-STD-1760	M8K1760Px	L0	MIL-STD-1760 multi-function module, selectable as Transformer or Direct coupled via a DIP switch.
MIL-STD-1760 Monitor Only	M8K1760PxM	MO	MIL-STD-1760 multi-function module for monitoring only.
MIL-STD-1760 Single Function	M8K1760PxS	Hx	MIL-STD-1760 single function module. Replace ' <b>Hx</b> ' with one of the following: <b>H1</b> = PxS Transformer coupled mode <b>H2</b> = PxS Direct coupled mode
MIL-STD-1760 Single Function Monitor Only	M8K1760PxSM	Kx	MIL-STD-1760 module for monitoring only. Replace ' <b>Kx</b> ' with one of the following: <b>K1</b> = PxS Transformer coupled mode <b>K2</b> = PxS Direct coupled mode
MMSI	M8KMMSI-R5	R5	MMSI module with 5 EBR hub ports and 1 cBM port.
H009	M8KH009	D0	H009 interface module. This is a double-sized module and occupies two modules locations. It can be installed in module locations 0–1, 2–3 or 4-5 (not 6–7).
Discrete	M8KDiscrete	10	Discrete module with 10 bi-directional Discretes with TTL (0 to 5 volts) or avionics (0 to 32 volts) voltage levels.
Serial	M8KSerial-J <i>x</i>	Jx	Serial module with 2 channels, software selectable for RS-232 up to 3 Mbps and RS-422 and RS-485 up to 4 Mbps. Replace 'Jx' with one of the following: J1 = Channel 0 is RS-232; Channel 1 is RS-232 J2 = Channel 0 is RS-232; Channel 1 is RS-485 J3 = Channel 0 is RS-232; Channel 1 is RS-422 J4 = Channel 0 is RS-485; Channel 1 is RS-485 J5 = Channel 0 is RS-485; Channel 1 is RS-422 J6 = Channel 0 is RS-422; Channel 1 is RS-422
ADDA	M8KADDA	Px	A/D and D/A module.  Replace 'Px' with one of the following: P1 = DAC outputs only, 10 single ended or 5 differential P2 = ADC inputs only, 5 single ended or 5 differential P3 = Combined DAC and ADC 4 single ended or 2 differential DAC outputs and 3 single ended or 3 differential ADC inputs

Table 4-2 Module Codes (Continued)

Chapter 4 Ordering Information

## 4.1 Part Number Examples

When ordering a board with a number of different protocol modules, the module codes must be in the following form:

Example: EXC-8000PCleHC/A0B1C0D0

The first module code in the part number is Module 0, the second is Module 1, and so on.

If one or more empty module locations are required in between other modules, insert an asterisk (\*). Also, an asterisk is required before the module code of any double-sized module, to indicate that the module occupies two module locations.

Example: EXC-8000PCleHC/A0\*F0

This is an EXC-8000PCIeHC board with:

1 *M8K429RT5* module at module location 0 Module location 1 is empty 1 *M8K1553Px* module at module location 2 Module locations 3 is empty

Example: EXC-8000PCleHC/J2J3

This is an *EXC-8000PCIeHC* board with:

 $\it M8KSerial$  module with channel 0 as RS-232 and channel 1 as RS-485 at module location 0

 $\it M8KSerial$  module with channel 0 as RS-232 and channel 1 as RS-422 at module location 1

Module locations 2 and 3 are empty

Example: EXC-8000PCleHC/J6T1\*D0

This is a *EXC-8000PCIeHC* with:

- 1 M8KSerial module with two RS-422 channel at module location 0.
- 1 *M8K1553PxS* single function Transformer coupled module at module location 1.
- 1 M8KH009 interface double-sized module at module locations 2 and 3.

Chapter 4 Ordering Information

#### 4.1 **Adapter Cable Ordering Information**

An adapter cable may be ordered using the X8K-prefix followed by the letter of each module code:

> Module Codes (without the digit) Length of Cable in Meters (default 0.5 meters)

Adapter cable P/N: X8K-MMMM-L

#### **Examples:**

Adapter cable for the EXC-8000PCIeHC/F0F0A0A0 board – X8K-FFAA-0.5 -2 M8K429RT5 modules and 2 M8K1553Px modules -

0.5 meters in length.

Adapter cable for the EXC-8000PCIeHC/I0R5N1 (or N2) **X8K-IRN(ES)-1** board - 1 M8KDiscrete module, 1 M8KMMSI and 1 M8K717

module (HBP or BPRZ) - with an External Signals Connec-

tor, 1 meter in length.

X8K-T(RT)CJ-0.3 – Adapter cable for the EXC-8000PCIeHC/T1C0J1 (or T2, or

J2–J6) board – 1 M8K1553PxS module, 1 M8K708 and 1 M8KSerial module – with an RT Lock Connector for the

M8K1553PxS module, 0.3 meters length.

Adapter cable for EXC-8000PCIeHC/J6T1\*D0 (J1-J5 and/or X8K-JT\*D-0.5

> T2) board with 1 M8KSerial module, 1 M8K1553PxS single function module and 1 double-sized M8KH009 module, 50cm

length.

The information contained in this document is believed to be accurate. However, no responsibility is assumed by Excalibur Systems, Inc. for its use and no license or rights are granted by implication or otherwise in connection therewith. Specifications are subject to change without notice.

August 2022, Rev A-2

page 4 - 4 Excalibur Systems